


# FlashLock Profile Battery Replacement


**Note:** Note the positioning of the screw hole and the beeper hole in relation to the two LEDs shown in Figure 1. DO NOT insert wrench into beeper hole.

- 1) Use the provided T6 Torx wrench (HDM1893) to loosen the set screw. Rotate the wrench clockwise from the front of the lock as shown in Figure 2.
- 2) Unscrew the knob cap and set aside.
- 3) Remove the EL123 battery that is underneath the circuit board, inserting a new one negative side down.
- 4) Lightly depress the battery to make sure it has full contact with the spring.
- 5) Tuck the wires from the circuit board into the shell to one side and seat the circuit board, aligning the post through the hole in the circuit board.
- 6) While pressing down on the circuit board, tilt the side opposite the post up to create temporary tension to keep the circuit board in place. See Figure 3. The circuit board should light up and beep when it touches the battery.
- 7) Screw on the knob cap. If the cap does not screw on easily, check that the circuit board is still set over the post and repeat Step 6 if necessary.
- 8) Fully tighten the knob cap, then check for alignment. The marker on the face of the knob cap should be aligned with the screw hole as in Figure 4. You may have to slightly loosen the cap for proper alignment.
- 9) Tighten the set screw as in Step 1, turning the wrench counter-clockwise as looking at the front of the lock.
- 10) Test the lock for functionality, verifying that the cap is locked in place and unlocks with a key fob.

For further questions and assistance, please contact CyberLock Support by email at [support@cyberlock.com](mailto:support@cyberlock.com) or by calling 541-738-5500

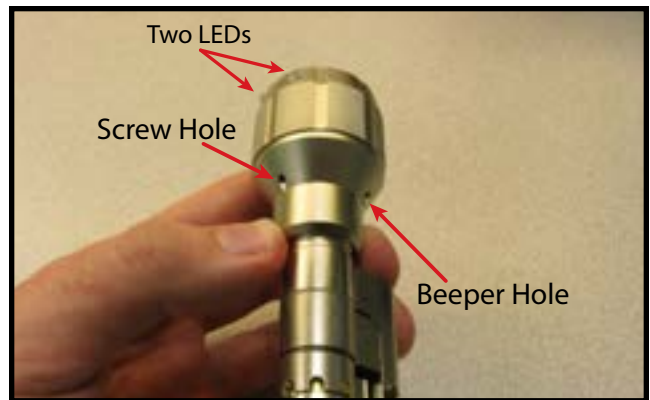

**Figure 1: Screw and Beeper Hole**

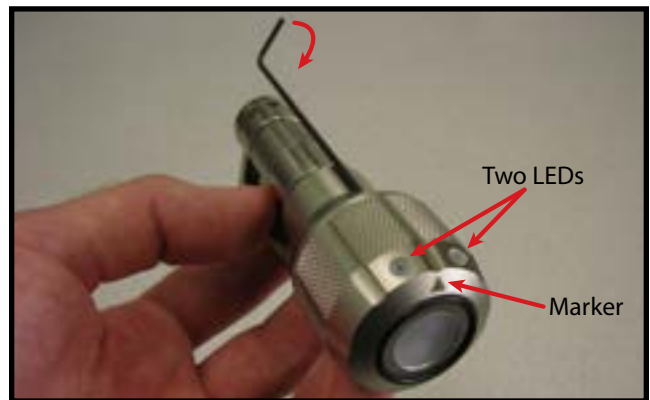

**Figure 2: Loosen Set Screw**



**Figure 3: Skewed Circuit Board on Post**



**Figure 4: Alignment**